

HCO BG30L Quick Start Manual

1. In the package, you should receive:

Camera	Li-ion Battery	Micro SD Card	Power Adapter
Manual	Remotes	USB Cable	Mounting Hardware

2. Open the battery and cards slot compartment by push the back cover down.
3. Insert the SIM card and the Micro SD card as the way marked.

Connect the battery cable to the port on the left side of the Micro SD card slot. Then slide the back cover back.



4. Turn the camera on. You may need to connect the AC/DC adapter if the battery runs low. Wait until the camera passes the HCO logo screen, the menu will come up (blue screen).
5. Go to the menu and format the Micro SD card: Press MENU → press DOWN arrow → press OK → press LEFT or RIGHT arrow to highlight YES → press OK.
6. After format successfully, turn the camera off.
7. Connect the camera to your computer via USB (supplied). Turn the camera on. You will see USB mode on the camera screen.

8. You will have a removable drive show in your Computer. Open that drive (folder). You will see three folders: AUDIO, MMS and PICTURE.
9. Open MMS folder, double click on PROFILE.TXT. It will open as a text pad file as shown below.

```
[ for MMS application  
[Via WAP Settings]
```

```
URL=http://mmsc.monternet.com  
APN=cmwap  
IP=10.0.0.172  
Port=80
```

Wireless carrier network parameters. You may ask your carrier or get from HCO.

```
Account=  
Password=
```

Not required for all wireless carriers.

```
MasterNum=  
PhoneNum2=  
PhoneNum3=  
PhoneNum4=
```

The phone numbers will receive the photos. Must have at least one.

```
; for Email application  
[Via Internet Settings]
```

```
GPRSAPN=cmnet  
GPRSAccount=  
GPRSPassword=
```

Wireless carrier's GPRS settings, not required

```
ReceiveEmail1=  
ReceiveEmail2=  
ReceiveEmail3=  
ReceiveEmail4=
```



The emails will receive the photos. Must have at least one.

```
SendEmailAddr=  
SendEmailPassword=  
SendEmailPort=  
SendEmailServer=
```

Your mail server to send the email in GPRS mode. Not required unless the GPRS email mode is used.

10. You will find the correct AT&T or T-Mobile network settings on the other side of this manual.
11. After you put the correct settings for the wireless carrier you are using. Save the file and turn the camera off.

12. Turn the camera on. You may need to connect the AC/DC adapter if the battery runs low. Wait until the camera passes the HCO logo screen, the menu will come up (blue screen).

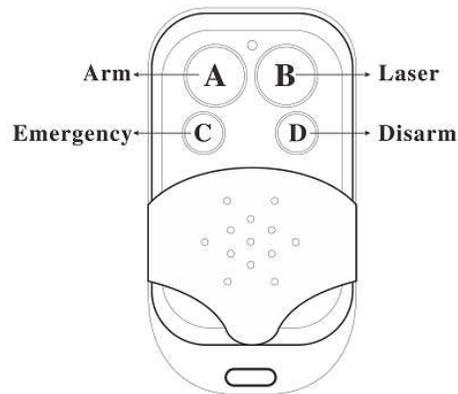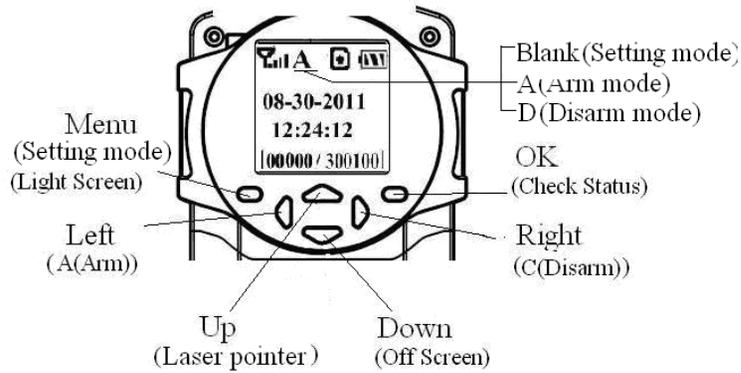

13. Please refer to the function key on the camera and the remote. Arm will put the camera in LIVE mode. Disarm will exit from the LIVE model. Laser will turn on the laser point to help you mount the camera. Emergency will make the camera call the first phone number in the list (Master Number).

AT&T and T-Mobile Network Parameters

	AT&T Network Parameters	T-Mobile Network Parameters
MMS	URL=http://mmsc.cingular.com APN=wap.cingular IP=066.209.11.32 Port=80	URL=http://216.155.174.84/servlets/mms APN=wap.voicestream.com IP=216.155.165.050 Port=8080
GPRS	GPRSAPN=wap.cingular GPRSAccount=wap@cingulargprs.com GPRSPassword=CINGULAR1	GPRSAPN=wap.voicestream.com GPRSAccount= GPRSPassword=

HCO OUTDOOR PRODUCTS

Phone: 770-582-0004

Fax: 770-582-0335

support@hcooutdoors.com

www.hcooutdoors.com